


# How to install IOGear USB Serial GUC232A Win2k driver

HT10600001


OS: Windows XP

Keywords: iogear, usb, serial, guc232a, win2k

1. Open file **iogear.exe** and click on the **Unzip** button.

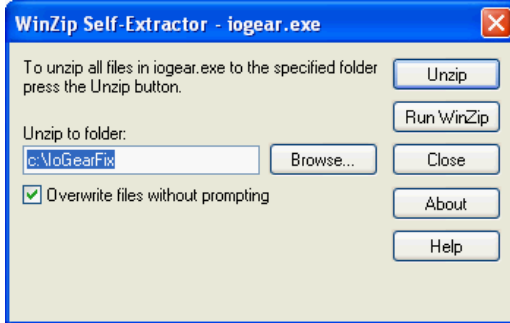


Click on **Ok**.

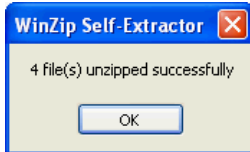


2. Plug in the USB adapter. At the Add New Hardware Wizard, click on **No, not this time** and click on the **Next** button.



3. Click on **Install from a list or specific location** and click on **Next**.

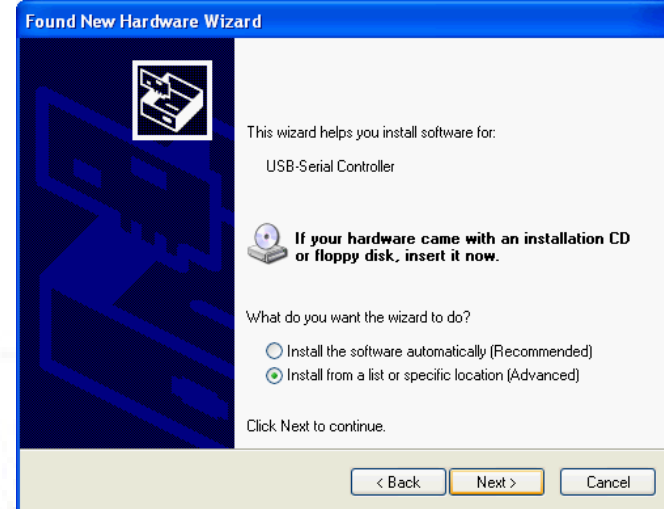

4. Uncheck **Search removable media** and check **Include this location in the search**. Type in **c:\iogear\guc232a** and click on **Next**.

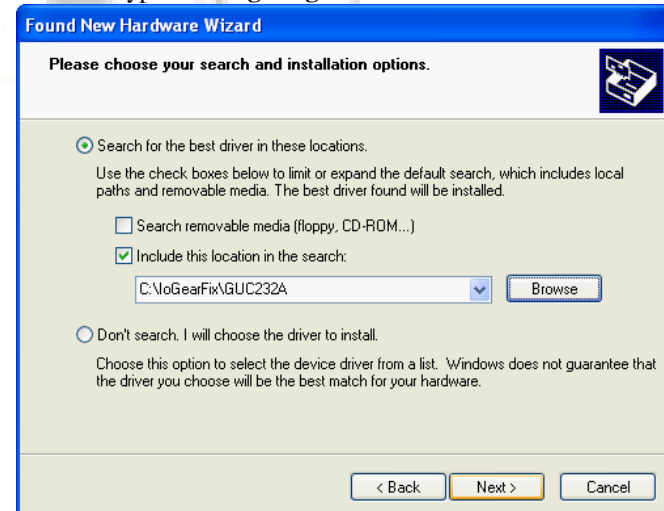

5. Click on the **Continue Anyway** button and click on **Next**.



7. Click on the **Finish** button.



6. On the **Files Needed** window, change the **Copy files from** path from **c:\iogear\guc232a\win2k** to **c:\iogear\guc232a** and click on **Ok**.

