


# How to reset the battery on a Lenovo ThinkPad T60/T61/T400/T500

HT31600007


OS: Windows XP

Keywords: reset, battery, Lenovo, thinkpad, t60, t61, t400, t500


1. Double-click your **Power Manager** (battery)

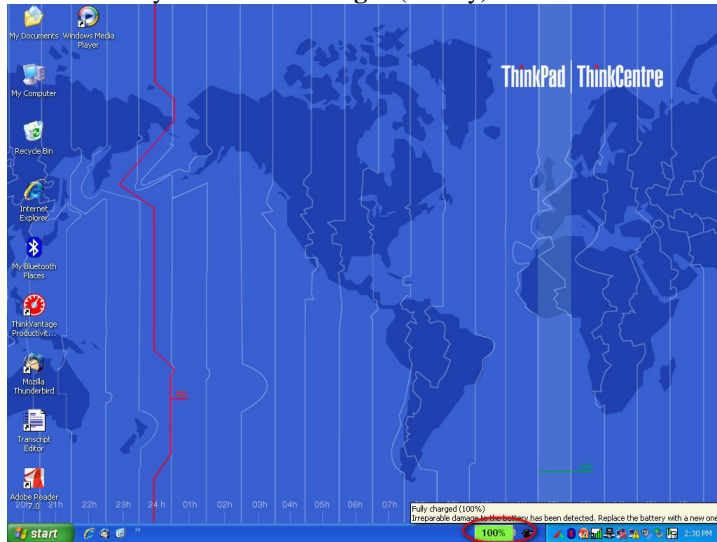


3. Click on the **Battery Maintenance** button.

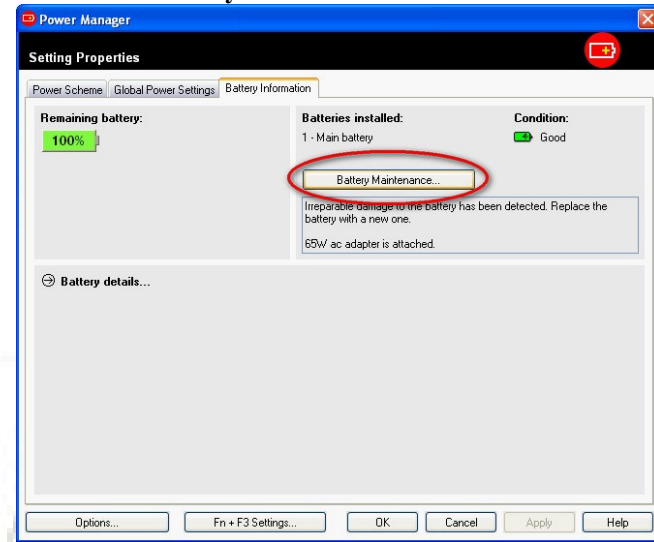

2. Click on the **Battery Information** tab.

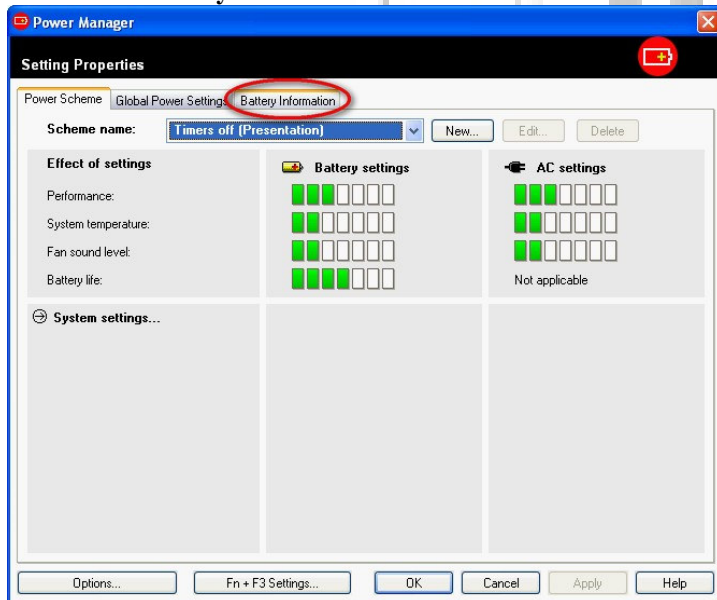

4. Click on **Perform Reset**.

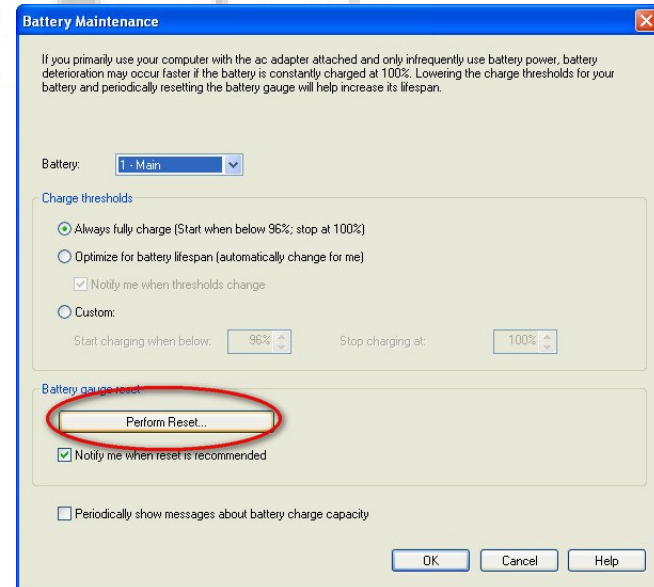

5. Read instructions carefully and click on **Continue**.

